


SECURO FLAT WALL MOUNT

USER MANUAL | ENGLISH

COMPONENTS

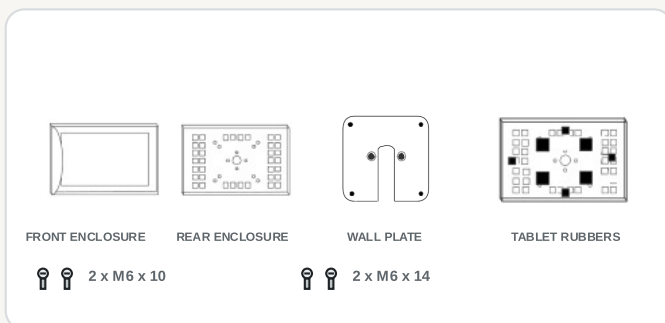


BEFORE INSTALLATION

- Check that all supplied components and screws are present.
- Use wall plugs and screws suitable for the wall material and load. Wall fixings are not included.
- Check the fixing area for concealed cables and pipes before drilling.

IMPORTANT


Install only on a sound, load-bearing surface. Tighten all fixings firmly, but do not overtighten or distort the wall plate.

1 DETERMINE POSITION AND FIX RUBBERS

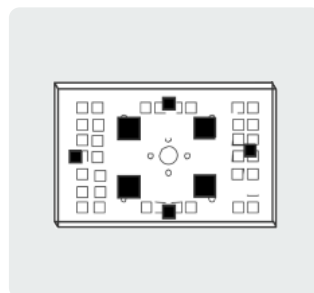


Choose portrait or landscape. Fit the tablet rubbers on the rear enclosure so the tablet is exactly centered. See the separate manual "Fixing the rubbers".

2 MARK THE WALL

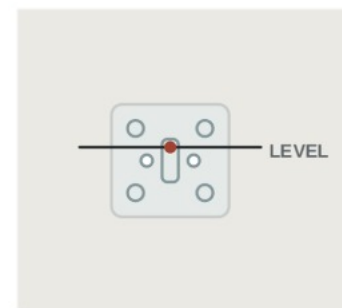


Hold the wall plate level at the required height and mark the four outer wall-fixing holes.

3 FIX THE PLATE TO THE WALL

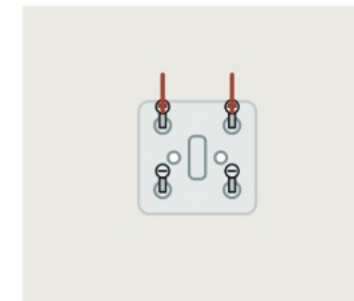

Drill the wall, insert suitable plugs and fasten the wall plate through the four outer holes. Wall fixings are not included.


4 MOUNT ENCLOSURE TO THE PLATE

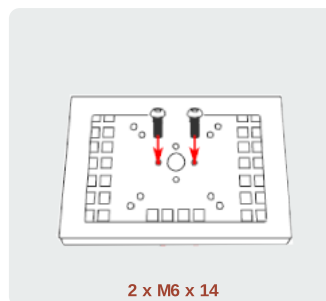

Fasten the rear enclosure to the plate with 2 x M6 x 14 screws.


Optional: guide the power cable through the hole in the casing.
Optional: install the optional key lock.

5 PLACE TABLET AND FIT FRONT

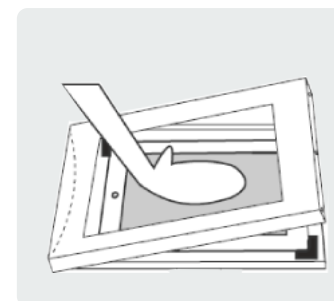

Place the tablet and fit the front enclosure over the rear enclosure while pressing the tablet onto the rubbers.

6 FASTEN BOTH PARTS

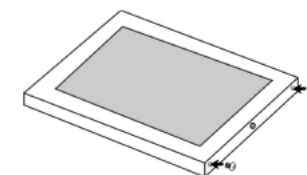

Fasten both parts of the casing with the 2 x M6 x 10 screws.